


Follow the three steps below to determine the coated and uncoated sides of some material.

- 1.** Take a sheet and fold it over on itself.
- 2.** Rub the surfaces between your fingers noting the resistance to slip.
- 3.** Reverse the sheet and test again.
The side that slips easy is the uncoated side.

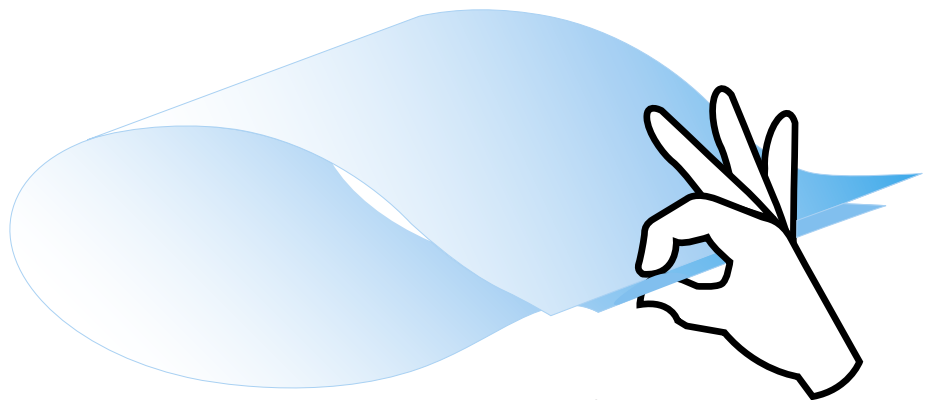

Artist Conception

Contact:

Waytek Corp
400 Shotwell Drive
Franklin, Ohio 45005 USA
937-743-8040
fax 937-743-8041

mail@waytekcorp.com